



**SPARE PARTS LIST**

1	HEX BOLT		45	REAR MOTOR COVER
2	LOCK WASHER		46	FAN
3	CYLINDER HEAD		47	HEX BOLT
4	EXHAUST ELBOW		48	LOCK WASHER
5	CYLINDER GASKET		49	SPACER
6	VALVE PLATE		50	EXIT RETAINING RING
7	SCREW		51	MOTOR COVER
8	LOCK WASHER		52	/
9	FLAT WASHER		53	SCREW
10	VALVE LIMITER		54	QUICK CONNECTOR
11	VALVE REED		55	PRESSURE GAUGE Y40
12	POSITION PIN		56	PRESSURE GAUGE Y50
13	INLET VALVE		57	FL REGULATOR
14	PISTON		58	CONNECTOR
15	CYLINDER GASKET UPPER		59	PRESSURE SWITCH
16	CYLINDER		60	BALL VALVE 1/4
17	CYLINDER GASKET LOWER		61	COIL
18	COMPRESSION RING		62	/
19	OIL RING		63	STRAIN RELIEF
20	PISTON PIN		64	SAFETY VALVE
21	EXIT RETAINING RING		65	COMPRESSION NUT
22	CONNECTING ROD		66	RELIEF TUBE
23	CRANK		67	POWER CORD
24	CAP SCREW		68	CABLE CONNECTOR
25	OIL FILL CAP		69	CABLE CONNECTOR
26	SCREW		70	PLASTIC HANDLE
27	OIL INDICATOR		71	AIR TANK
28	OIL INDICATOR SEAL		72	CHECK VALVE
29	CRANKCASE COVER		73	/
30	COVER SEAL		74	/
31	OIL SEAL		75	FOOT
32	CRANKCASE		76	/
33	HEX NUT		77	DRAINE VALVE
34	FLAT WASHER		78	/
35	HEX BOLT		79	SCREW
36	OIL PLUG		80	WHEEL
37	/		81	/
38	CAPACITOR		82	TUBE
39	/		83	COMPRESSION NUT
40	/		84	WASHER
41	BALL BEARING 6204		85	AIR FILTER
42	ROTOR			
43	BALL BEARING 6202			
44	STATOR			